IADC WellCAP Well Control Worksheet
Surface Stack - Wait and Weight Method

Well Name: _____ **Completed By:** _____ **Date:** ____ / ____ / ____

PRE-RECORDED INFORMATION

TRUE PUMP OUTPUT: _____ (Bbls/Stk @ 100%) X _____ (% Efficiency) = _____ (TPO (Bbls/Stk))

Surface Line: _____ (Surface Line Capacity (Bbls)) ÷ _____ (True Pump Output (Bbls/Stk)) = _____ (Strokes to Pump)

DRILL STRING CAPACITY:

	Size (in.)	Weight (lb/ft)	Bbls/ft		Length (ft)		DP / HWDP / DC	
Drill Pipe #1:	_____	_____	_____	X	_____	=	_____	Bbls
Drill Pipe #2:	_____	_____	_____	X	_____	=	_____	Bbls
HWDP:	_____	_____	_____	X	_____	=	_____	Bbls
Drill Collars #1:	_____	_____	_____	X	_____	=	_____	Bbls
Drill Collars #2:	_____	_____	_____	X	_____	=	_____	Bbls

_____ Total Drill String Capacity (Bbls)

STROKES FROM SURFACE TO BIT:

_____ (Total Drill String Capacity (Bbls)) ÷ _____ (True Pump Output (Bbls/Stk)) = _____ (Strokes, Surface to Bit)

ANNULAR CAPACITY:

Between CSG and DP:	_____ Bbls/ft	X	_____ ft	=	_____ Bbls
Between Liner #1 and DP:	_____ Bbls/ft	X	_____ ft	=	_____ Bbls
Between Liner #2 and DP:	_____ Bbls/ft	X	_____ ft	=	_____ Bbls
Between OH and DP/HWDP:	_____ Bbls/ft	X	_____ ft	=	_____ Bbls
Between OH and DC:	_____ Bbls/ft	X	_____ ft	=	_____ Bbls

STROKES FROM BIT TO SHOE:

_____ (Open Hole Annular Vol. (Bbls)) ÷ _____ (True Pump Output (Bbls/Stk)) = _____ (Strokes, Bit to Shoe)

STROKES FROM BIT TO SURFACE:

_____ (Total Annular Volume (Bbls)) ÷ _____ (True Pump Output (Bbls/Stk)) = _____ (Strokes, Bit to Surface)

TOTAL STROKES FROM SURFACE TO SURFACE:

_____ (Strokes, Surface to Bit) + _____ (Strokes, Bit to Surface) = _____ (Strokes, Surface to Surface)

MAXIMUM ALLOWABLE MUD DENSITY (ppg)

(_____ (Surface LOT Pressure (psi)) ÷ 0.052 ÷ _____ (Shoe Depth (ft,TUD))) + _____ (LOT Mud Density (ppg)) = _____ ppg **MAX. ALLOWABLE MUD DENSITY**

MAXIMUM ALLOWABLE ANNULAR SURFACE PRESSURE (MAASP) (psi)

(_____ (Max. Allowable Mud Density (ppg)) - _____ (Present Mud Density (ppg))) X 0.052 X _____ (Shoe Depth (ft,TUD)) = _____ psi **MAX. ALLOWABLE ANNULAR SURFACE PRESSURE**

CURRENT WELL DATA

PRESENT MUD WEIGHT: _____ ppg

SLOW CIRCULATION RATE (SCR):

SCR taken @ _____ (ft)

	Stks/min	Pressure(psi)	Bbl/min	Pressure(psi)
Pump #1				
Pump #2				
Pump #3				

CASING DATA:

CASING _____ (size) , _____ (ID) , _____ (weight)

SHOE DEPTH @ MD / TVD _____ / _____ ft

SHOE TEST DATA:

Depth #1 _____ (psi) @ Test MW of _____ (ppg)

Depth #2 _____ (psi) @ Test MW of _____ (ppg)

Depth #3 _____ (psi) @ Test MW of _____ (ppg)

LINER #1 _____ (size) , _____ (ID) , _____ (weight)

LINER #2 _____ (size) , _____ (ID) , _____ (weight)

LINER #1 TOP DEPTH _____ ft

LINER #2 TOP DEPTH _____ ft

LINER #1 SHOE DEPTH _____ ft

LINER #2 SHOE DEPTH _____ ft

TVD CASING or LINER _____ ft


HOLE DATA:

TOTAL DEPTH (MD) _____ ft

TOTAL DEPTH (TVD) _____ ft

BIT DEPTH @ MD / TVD _____ / _____ ft

BIT SIZE _____ inches

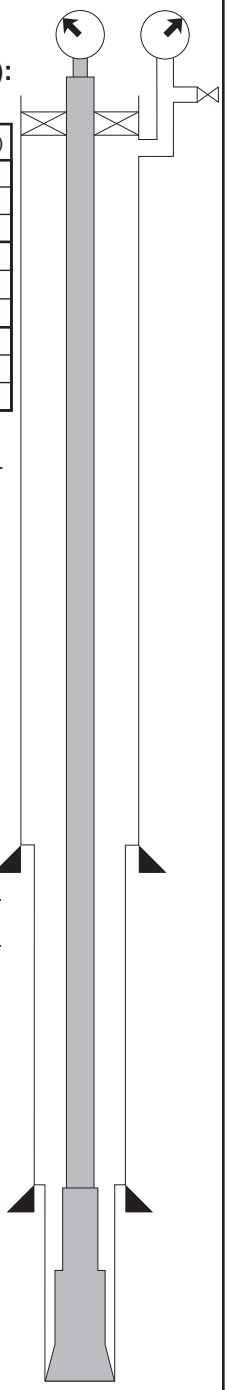

DISCLAIMER: This Well Control Worksheet is intended solely for the use of the IADC and IADC accredited schools and organizations engaging in the teaching of the IADC WellCAP Well Control classes. The IADC, its employees or others acting on its behalf, makes no warranties or guarantees expressed, implied or statutory, as to any matter whatsoever, with respect to the use of this Well Control Worksheet.

KICK DATA

SIDPP: _____ psi **SICP: _____ psi** **PIT GAIN: _____ Bbls** **Time of Incident: ____ : ____**

CALCULATIONS

KILL MUD WEIGHT (KMW)

(_____ ÷ 0.052 ÷ _____) + _____ = _____ ppg KILL MUD WEIGHT

SIDPP (psi) | True Vertical Depth (ft) | Present Mud Weight (ppg)

INITIAL CIRCULATING PRESSURE (ICP)

_____ + _____ = _____ psi INITIAL CIRCULATING PRESSURE

SIDPP (psi) | Pump Pressure (psi) @ SCR of _____SPM

FINAL CIRCULATING PRESSURE (FCP)

_____ x _____ ÷ _____ = _____ psi FINAL CIRCULATING PRESSURE

Pump Pressure (psi) @ SCR of _____SPM | Kill Mud Weight (ppg) | Present Mud Weight (ppg)

PRESSURE CHART

Stroke or Volume	Theoretical Drill Pipe Pressure	Actual Drill Pipe Pressure	Actual Casing Pressure	Actual Pit Volume Deviation
SURFACE 0	ICP			
BIT	FCP			

_____ ÷ 10 = _____ Strokes Surface to Bit | Strokes per Step


_____ - _____ ÷ 10 = _____ Initial Circulation Pressure | Final Circulation Pressure | PSI per Step

BIT	FCP			
SURFACE				

_____ ÷ 10 = _____ Strokes Bit to Surface | Strokes per Step

DISCLAIMER: This Well Control Worksheet is intended solely for the use of the IADC and IADC accredited schools and organizations engaging in the teaching of the IADC WellCAP Well Control classes. The IADC, its employees or others acting on its behalf, makes no warranties or guarantees expressed, implied or statutory, as to any matter whatsoever, with respect to the use of this Well Control Worksheet.

GRAPHIC ANALYSIS

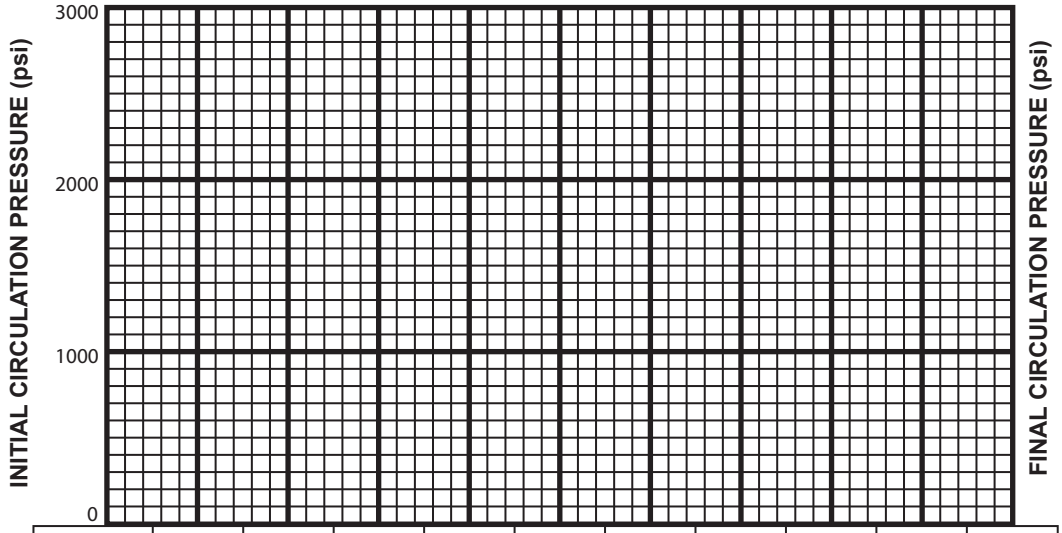

Stroke										
Pressure										
Time										

FORMULAS

1. Pressure Gradient (psi/ft) = Mud Weight (ppg) x 0.052

2. Hydrostatic Pressure (psi) = Mud Weight (ppg) x 0.052 x Depth (ft, TVD)

3. Capacity (bbls/ft) = Inside Diameter^2 (in.) ÷ 1029.4

4. Annular Capacity(bbls/ft) = (Inside Diameter of Casing^2 (in.) or Hole Diameter^2 (in.) - Outside Diameter of Pipe^2 (in.)) ÷ 1029.4

5. Pipe Displacement (bbls/ft) = (Outside Diameter of pipe^2 (in.) - Inside Diameter of pipe^2 (in.)) ÷ 1029.4

6. Maximum Allowable Mud Weight (ppg) = $\frac{\text{Surface LOT Pressure (psi)}}{\text{Shoe Depth (ft, TVD) x 0.052}}$ + LOT Mud Weight (ppg)

7. MAASP (psi) = [Maximum Allowable Mud Weight (ppg) - Present Mud Weight (ppg)] x 0.052 x Shoe TVD (ft)

8. Pressure Drop per Foot Tripping Dry Pipe (psi/ft) = $\frac{\text{Drilling Mud Weight (ppg) x 0.052 x Metal Displacement (bbl/ft)}}{\text{Casing Capacity (bbl/ft) - Metal Displacement (bbl/ft)}}$

9. Pressure Drop per Foot Tripping Wet Pipe (psi/ft) = $\frac{\text{Drilling Mud Weight (ppg) x 0.052 x Closed End Displacement (bbl/ft)}}{\text{Casing Capacity (bbl/ft) - Closed End Displacement (bbl/ft)}}$

10. Formation Pressure (psi) = Hydrostatic Pressure Mud in Hole (psi) + SIDPP (psi)

11. EMW (ppg) @ Shoe = (SICP (psi) ÷ 0.052 ÷ Shoe Depth (ft, TVD)) + Present Mud Weight (ppg)

12. Sacks (100 lb) of Barite Needed to Weight-Up Mud = $\frac{\text{Bbls of Mud in System x 14.9 x (KMW - OMW)}}{\text{(35.4 - KMW)}}$

NOTE: This formula assumes that the average density of Barite is 35.4 ppg and the average number of sacks (100lb) per barrel is 14.9.

13. Volume Increase from Adding Barite (bbls) = Number of Sacks (100 lb) added ÷ 14.9

14. Equivalent Mud Weight (ppg) @ _____ depth (ft) = $\left[\frac{\text{Pressure (psi)}}{\text{Depth (ft, TVD) x 0.052}}\right]$ + Current Mud Weight (ppg)

15. Estimated New Pump Pressure at New Pump Rate (psi) = Old Pump Pressure (psi) x $\left[\frac{\text{New Pump Rate (SPM)}}{\text{Old Pump Rate (SPM)}}\right]^2$

16. Estimated New Pump Pressure with New Mud Weight (psi) = Old Pump Pressure (psi) x $\frac{\text{New Mud Weight (ppg)}}{\text{Old Mud Weight (ppg)}}$

DISCLAIMER: This Well Control Worksheet is intended solely for the use of the IADC and IADC accredited schools and organizations engaging in the teaching of the IADC WellCAP Well Control classes. The IADC, its employees or others acting on its behalf, makes no warranties or guarantees expressed, implied or statutory, as to any matter whatsoever, with respect to the use of this Well Control Worksheet.